

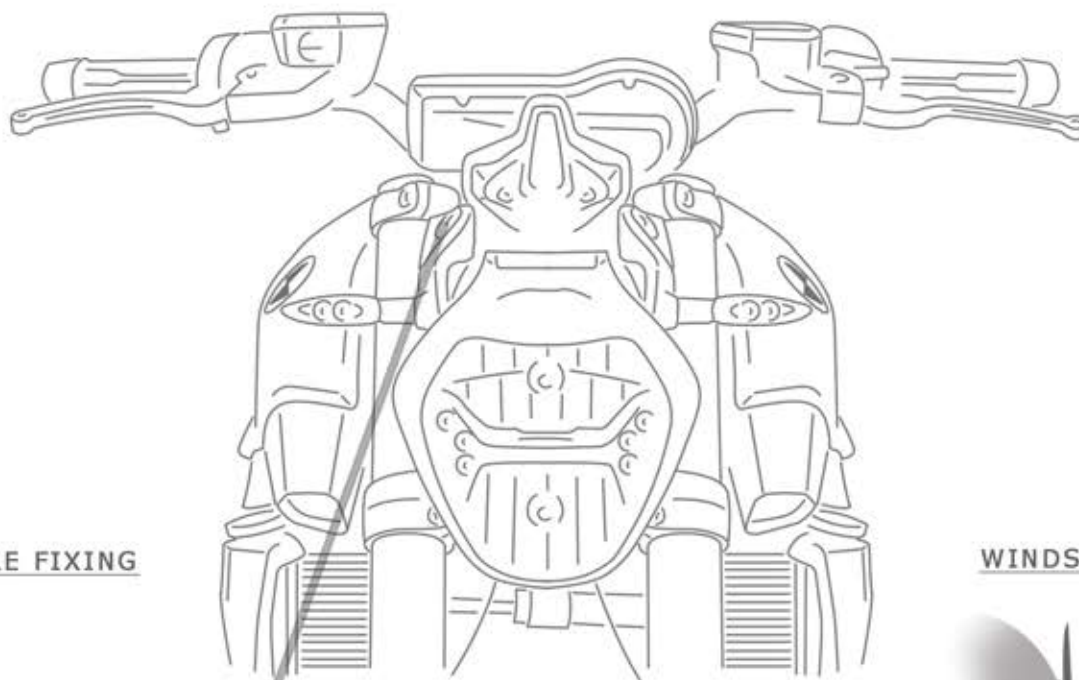
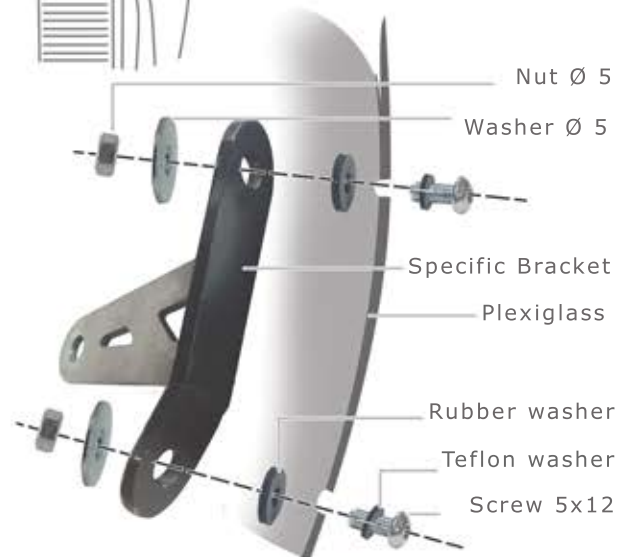
MOUNTING PROCEDURE**KIT WINDSHIELD
BMW R1200R****BR1300****KIT**

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKET
- X2. THICKNESS
- X4. SCREW "ROUND HEAD" 5X12
- X2. SCREW "ROUND HEAD" 8X45
- X4. TEFLON WASHER
- X4. LARGE WASHER Ø 5
- X4. RUBBER WASHER
- X4. AUTOLOCK NUT Ø 5

WWW.BARRACUDAMOTO.COM

MOUNTING PROCEDURE:

- REMOVE THE ORIGINAL SCREWS AND INSTALL THE BARRACUDA WINDSHIELD BRACKET USING THE 8X45 SCREWS YOU FIND INTO THE KIT;
- PUT ALL LIKE THE ILLUSTRATED SCHEME
- FIND THE RIGHT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED AND PROCEED TO LOCKING ALL THE SCREWS

**MOTOCYCLE FIXING****WINDSHIELD FIXING**

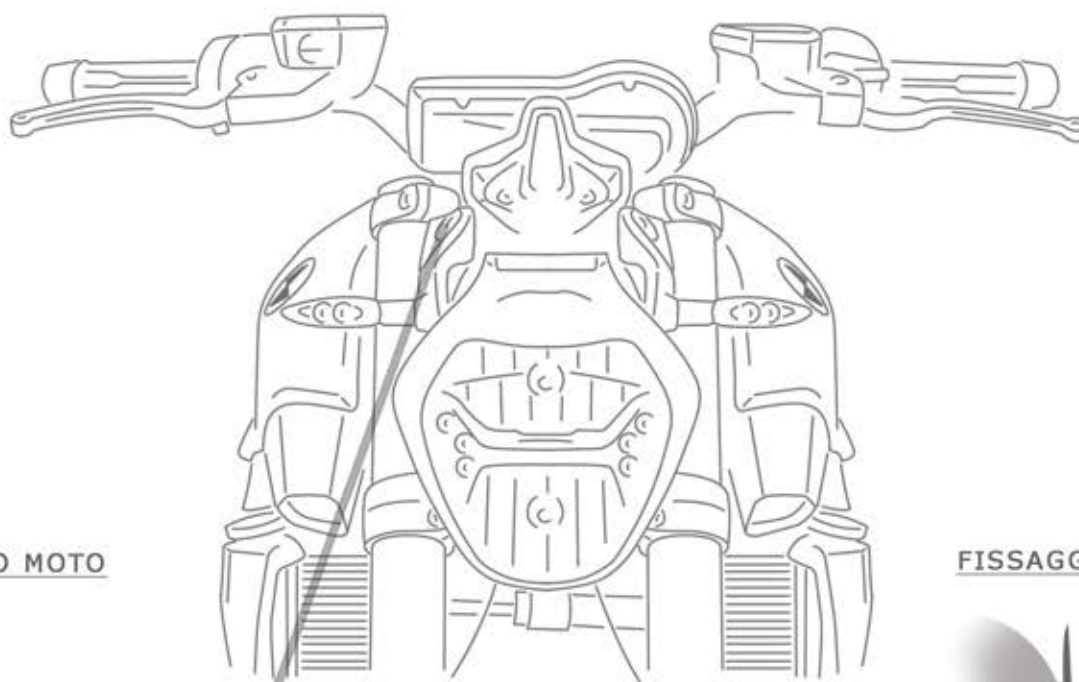
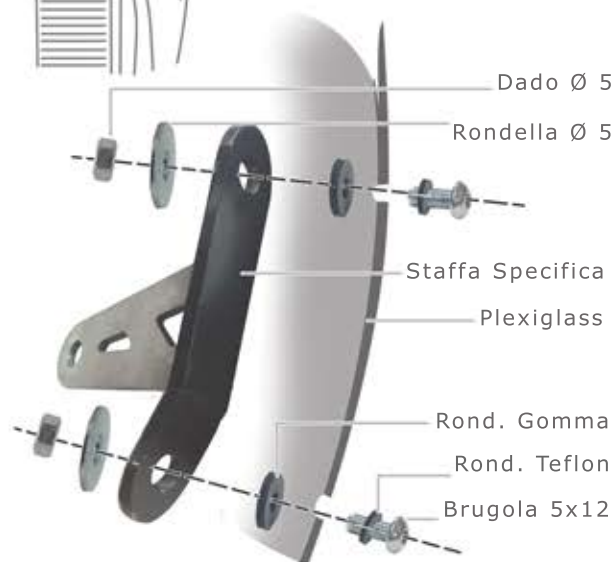
NOTE: DON'T LOCK TOO MUCH TO AVOID POSSIBLE BROKEN OF PLEXIGLASS.

ISTRUZIONI DI MONTAGGIO**KIT CUPOLINO
BMW R1200R****BR1300**WWW.BARRACUDAMOTO.COM**PROCEDURA MONTAGGIO:**

- RIMUOVERE LA BULLONERIA ORIGINALE ED INSTALLARE LE STAFFE DEL CUPOLINO BARRACUDA UTILIZZANDO LE BRUGOLE 8X45 E I TORNITI IN DOTAZIONE;
- POSIZIONARE IL TUTTO COME DA SCHEMA ILLUSTRATO;
- TROVARE LA GIUSTA POSIZIONE DEL CUPOLINO SULLE STAFFE PRECEDENTEMENTE MONTATE E PROCEDERE AL SERRAGGIO DI TUTTA LA VITERIA.

KIT

- X1. PLEXIGLASS
- X2. STAFFE SPECIFICHE
- X2. TORNITI
- X4. BRUGOLE "TESTA BOMBATA" 5X12
- X2. BRUGOLE "TESTA BOMBATA" 8X45
- X4. RONDELLE TEFLON
- X4. RONDELLE Ø 5 LARGHE
- X4. RONDELLE DI GOMMA
- X4. DADI Ø 5 AUTOBLOCCANTI

**FISSAGGIO MOTO****FISSAGGIO CUPOLINO****NOTE: NON SERRARE IN MODO ECCESSIVO ONDE EVITARE ROTTURE DEL PLEXIGLASS.**